



Party Rentals

An Alexander's U-Rent Company

1127 Andover Park W., Bldg D

Tukwila, WA 98188

(206) 282-1987 Phone (206) 283-4545 Fax

**55 & 100 CUP COFFEE MAKERS:
INSTRUCTIONS FOR USE**

SAFETY PRECAUTIONS:

- Scalding may occur if the lid is removed during the brew cycle.
- Never touch hot surfaces; always use handles or knobs.
- Close supervision is necessary when this appliance is used near children.
- Do not let the electrical cord touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use coffee maker for any other use than brewing coffee or heating water.

AMOUNTS OF COFFEE TO USE:

1 cup of brewed coffee = 5 fluid ounces. Brew time is approximately 60 minutes for full batches.

55 cup Coffeemaker: Do not make less than 25 or more than 55 cups of coffee at one time.

<u>Water Level</u>	<u>Strong</u>	<u>Mild</u>
55 cups	5 cups	3 1/2 cups
45 cups	4 cups	2 2/3 cups
35 cups	3 1/4 cups	2 cups
25 cups	2 1/4 cups	1 1/4 cups

100 cup Coffeemaker: Do not make less than 40 or more than 100 cups of coffee at one time.

<u>Water Level</u>	<u>Strong</u>	<u>Mild</u>
100 cups	8 cups	6 1/4 cups
80 cups	6 1/2 cups	5 cups
60 cups	5 cups	4 cups
40 cups	3 1/2 cups	2 1/2 cups

OPERATION:

- Remove cover and basket.
- Make sure spigot is closed.
- Use fresh **COLD** tap water to fill the coffee maker to the desired level using the markings on the inside of the maker. Never use hot water to make coffee; the brewing cycle is timed to begin with a cold water.
- Wet the coffee basket to help keep small particles from sifting through. Add the measured amount of regular grind coffee directly to the basket; no filter is needed.
- Make sure stem is fitted securely in the center well of the coffee maker then place basket on stem.
- Place cover on the coffee maker and turn so the tabs lock securely into the handles.
- Plug coffee maker into standard household 120 volt AC wall outlet to begin the brewing process.
- The RED indicator light will come on when the percolator has finished and the coffee is ready. The coffee maker will automatically switch to a "keep warm" setting.
- For best flavor, carefully remove the hot coffee basket and grounds at the end of the brew cycle to keep bitter oils from dripping into the coffee. Replace the cover and serve.
- Unplug the coffee maker when just 2-3 cups remain.

CLEANUP:

- Unplug the coffee maker when not in use and before cleaning.
- Allow coffee maker to cool before removing parts or cleaning.
- Rinse the inside of the coffee maker and clean out the basket before returning.
- NEVER IMMERSE COFFEE MAKER IN WATER