



BEVERAGE FOUNTAIN OPERATING INSTRUCTIONS

ELECTRICAL HOOKUP:

The fountain is supplied with a standard 120V line cord and requires a 15 amp 120V outlet. Plug the unit directly into the grounded outlet; **DO NOT USE AN EXTENSION CORD WITH THIS MACHINE!**

PREPARING THE FOUNTAIN:

Place the fountain on a flat, sturdy, level surface near your power outlet. As some splashing from the fountain may occur, it is recommended that a plastic covering approximately 6-8 inches larger than lower reservoir be placed under the unit.

BEVERAGE PREPARATION:

- This beverage fountain is designed to circulate **CLEAR BEVERAGES ONLY**.
- **DO NOT** use any liquid that contains pulp, seeds, fruit, rinds, etc. as they will not work in this fountain.
- Use of ice cream or foamy punches will restrict the flow of the beverage in this fountain.
- Beverage should be pre-chilled when possible.
- To chill a beverage which isn't pre-chilled, use chunks of ice in the bowl (or placed in a plastic bag first) or add several pieces of dry ice to the bowl.

OPERATION:

- Pour approximately two quarts of beverage into the lower reservoir.
- Turn the power switch on.
- If liquid does not circulate within one minute, turn switch off for 10 seconds then back on.
- Repeat this procedure until the beverage flows freely.

AFTER USE:

- Turn off power switch.
- Empty out any remaining beverage.
- Fill lower reservoir with approximately 2 gallons of warm water and turn on power switch.
- Circulate water for 2-3 minutes then turn off switch and empty out water.
- Wipe off the outside surface of the fountain.

WARNING:
DO NOT RUN BEVERAGE FOUNTAIN DRY.
DO NOT IMMERSE BEVERAGE FOUNTAIN IN WATER.
DO NOT DISASSEMBLE BEVERAGE FOUNTAIN.